

## Identificación de eventos SP9600

Evento	NT ID	ID evento	Estado 0	ID evento	Estado 1
Tow	0	0	End tow	80	Normal to tow
Idle	1	1	End idle	81	Normal to Idle
Parking	2	2	Move to Parking	82	Parking to Move
			Speed enters into		Speed is out of
Over Speed	3	3	setting range	83	setting range
		4	From jamming to	0.4	From no jamming to
GSM Jamming	4	4	no jamming	84	jamming
Geo-fence	5	5	Null	85	Geo –fence alarm
GPS first time position	6	6	Null	86	GPS first time position
GPS position	7	7	Null	87	From non-position to position
Emergency behavior	8	8	Null	88	Emergency behavior
Collision	9	9	Null	89	Harsh brake
Turnover	10	Α	Null	8A	Harsh accelerate
External battery	11	В	From have to not- have	8B	From not-have to have
SOS	12	С	Null	8C	SOS triggered
Charging	13	D	Non-charging	8D	Charging
Accelerometer calibration	14	Е	Null	8E	Static calibration
External battery	15	F	Normal	8F	Under voltage
Backup battery	16	10	Normal	90	Under voltage
Backap battery	-	10	TTOTTICL	- 00	Under voltage or
AD1	17	11	Normal	91	over voltage
IN1	18	12	From high to low	92	From low to high
SIM card balance	19	13	Null	93	Balance low notification
GPS non-position timeout	20	14	Null	94	Non-position timeout
Device removal	21	15	Device is installed	95	Device is removed
ACC	22	16	From ON to OFF	96	From OFF to ON
Engine	23	17	From ON to OFF	97	From OFF to ON
Reserved	24	18	I TOTAL ON TO OTT	98	TIOHIOTI LO ON
Reserved	25	19		99	
Reserved	26	19 1A		99 9A	
Reserved	27	1B		9B	
Reserved	28	1C		9C	



_	_	_		
Reserved	29	1D	9D	
Reserved	30	1E	9E	
Reserved	31	1F	9F	
Combo 0	56	38	B8	
Combo 1	57	39	В9	
Combo 2	58	3A	ВА	
Combo 3	59	3B	BB	
Combo 4	60	3C	ВС	
Combo 5	61	3D	BD	
Combo 6	62	3E	BE	
Combo 7	63	3F	BF	